



- 1) Charge Controller
- 3) Circuit breakers
- 6) Din Rail mountable Power Terminal Blocks
- 1) Wiring Kit Assembly pre-wiring and #10AWG Batt-Reg cable.
- 1) Back Panel

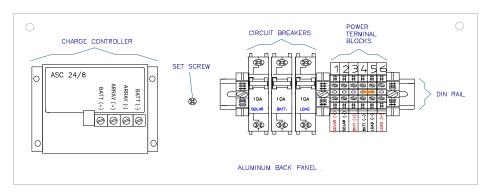



## 24 VOLT SYSTEMS



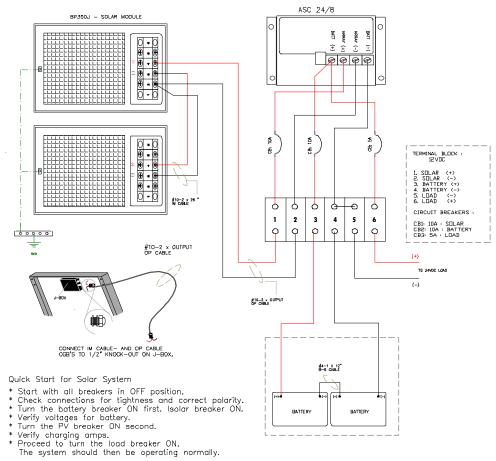

To change batteries or check system components :

- \* Turn the solar breaker OFF first.
  \* Turn the load breaker OFF second.
  \* Turn the battery breaker OFF last.

The system is now de—energized and components may be changed without risk of sparks. Remember however, the battery remains charged and capable of dangerous sparks or arcs if shorted. Neither a battery nor a sunlit solar module can be de—energized, only disconnected.



## Online Solar, LLC

642 Ponte Villa South Baltimore, MD 21230 Tel: +1.888.680.2427 Fax: +1.410.528.9445